



# MODBUS Protocol

## for CS141

## network card families

### Summary

<b>1. MODBUS PROTOCOL .....</b>	<b>2</b>
1.1. MODBUS COMMUNICATION PARAMETERS .....	2
1.2. AVAILABLE MODBUS FUNCTION CODES.....	2
1.3. EXCEPTION CODES .....	3
<b>2. COMMUNICATION EXAMPLE .....</b>	<b>4</b>
<b>3. MODBUS TABLES .....</b>	<b>6</b>
3.1. NIKY, NIKY S, KEOR LINE RT.....	6
3.2. DAKER DK, KEOR LP, KEOR S.....	8
3.3. DHEA, WHAD 800/2500, MEGALINE .....	10
3.4. WHAD 3000/6000, TRIMOD, TRIMOD HE, ARCHIMOD, ARCHIMOD HE .....	12
3.5. KEOR T .....	14
3.6. KEOR HP .....	16
3.7. KEOR HPE .....	18
3.8. STATUS BYTES TABLE ( SEE REGISTRY 109 OF ALL PREVIOUS TABLES ) .....	20
<b>4. APPENDIX.....</b>	<b>21</b>
4.1. RS485 CONNECTOR FOR CS141M AND CS141M SK.....	21
4.2. BUS TERMINATION .....	21

# 1. Modbus Protocol

MODBUS is a protocol for serial communication. Data is transmitted in form of 16bit registers (integer) or data byte status information. It is an open protocol and a common protocol in industry machinery. The fundamental structure of MODBUS has never changed due to compatibility reasons. MODBUS is also a single master protocol. The master controls the whole transmission and monitors potential occurring timeouts. The connected devices are only allowed to send telegrams if the master requests. For remote control and monitoring of devices the MODBUS interface in each CS141 can read out measurement values, events, status and other information in a master-slave protocol.

## 1.1. Modbus Communication Parameters

The CS141 always uses 8 data bits for communication.

If you receive faulty answers (Timeout Errors, Transaction ID Errors, Write Errors etc.), it may be, that the polling cycle was defined to fast. This causes the non-answered polling requests or even to a reboot of the CS141 through the integrated Watchdog, because the system is overloaded. Further on it can come to delayed answers during the MODBUS over IP or rather RS485 polling due to traffic into the bus or network, because the CS141 is a multi-device, which has to handle several tasks at the same time.

Please define a response timeout of at least 500ms (at a fast MODBUS over IP or RS485 network/bus or rather higher accordingly, e.g. 4000ms at slow connections). The timeout has to be increased until the errors stay out.

## 1.2. Available Modbus Function Codes

Implemented MODBUS functions in the CS141 units:

Code	Original Modbus Function
03H	Read Holding Registers
04H	Read Input Registers
10H	Write Multiple Registers

The CS141 makes no difference between function 03H and 04H. The baud rate is adjustable up to 38400 Baud.

Please note that the MODBUS adapter client allows a timeout of 40ms at 9600 baud for one value.

### 1.3. Exception Codes

Except for broadcast messages, when a master device sends a query to a slave device it expects a normal response. One of four possible events can occur from the master's query:

- If the slave device receives the query without a communication error, and can handle the query normally, it returns a normal response.
- If the slave does not receive the query due to a communication error, no response is returned. The master program will eventually process a timeout condition for the query.
- If the slave receives the query, but detects a communication error parity, LRC, or CRC, no response is returned. The master program will eventually process a timeout condition for the query.
- If the slave receives the query without a communication error, but cannot handle it (for example, if the request is to read a non-existent register the slave will return an exception response informing the master about the nature of the error.

#### Available Exception codes:

Code	Meaning
01H	Illegal: The command received in the query is not defined.
02H	Illegal: The address received in the query is not defined for the slave.
04H	Slave device failure: Internal slave device error

## 2. Communication Example

The following tables contain the general command descriptions and examples with Modbus RTU framing.

### Query:

slave no	function code	address of first word to read		word count		Checksum LRC or CRC
1 byte	1 byte	High byte	Low byte	High byte	Low byte	1 or 2 bytes

### Answer:

slave no	function code	byte count	high byte of first word	low byte of first word	bytes with contents of "n" words	Checksum LRC or CRC
1 byte	1 byte	1 byte	1 byte	1 byte	n * 2 bytes	1 or 2 bytes

### Read Words (Functions 03h and 04h)

Example: Read Words, Function 04h

Read one word at address 63h (= 99 decimal):

### Query:

Byte	1	2, 3	4, 5	6, 7	8, 9	10, 11	12, 13	14, 15	16	17
Meaning	Leading colon	Slave number	Function code	Address of first word to read high byte   low byte		Word count to read high byte   low byte		LRC	Carriage return	Line feed LF
HEX	[3A]	[30][31]	[30][34]	[30][30]	[36][33]	[30][30]	[30][31]	[39][37]	[0D]	[0A]

### Answer:

Byte	1	2, 3	4, 5	6,7	8, 9	10, 11	12, 13	14	15
Meaning	Leading colon	Slave number	Function code	Byte count	Contents of the word high byte   low byte		LRC	Carriage return	Line feed LF
HEX	[3A]	[30][31]	[30][34]	[30][32]	[31][32]	[33][34]	[42][33]	[0D]	[0A]

### HEX: Hexadecimal values of the data

→ The word at address contains the value 1234h = 4660 decimal.

Example: Read Words, Function 04h, RTU Mode

Read one word at address 63h (= 99 decimal) (

The word at address contains the value 1234h = 4660 decimal.):

### Query:

Byte		1	2	3	4	5	6	7	8	
Meaning	silent interval >= 3,5 characters	slave number	function code	address of first word to read high byte   low byte		word count to read high byte   low byte		CRC low byte   high byte		silent interval >= 3,5 characters
RTU HEX		[01]	[04]	[00]	[63]	[00]	[01]	[C1]	[D4]	

### Answer:

Byte		1	2	3	4	5	6	7	
Meaning	silent interval >= 3,5 characters	slave number	function code	byte count	contents of the word		CRC		silent interval >= 3,5 characters
RTU HEX		[01]	[04]	[02]	high byte	low byte	low byte	high byte	
					[12]	[34]	[B4]	[47]	

### 3. Modbus Tables

Note: "Type U/S": this defines whether the answer has an algebraic sign (math. +/-) or not.

**U** means "unsigned". **S** means "signed", so this answer may be positive or negative.

The answer may be true or false. Some clients (f.e. MODBUS Poll) use MODBUS addresses with a valid range between 0-65535. Some clients use as the valid range 1-65536, so it may be necessary to add 1 to the address.

#### 3.1. Niky, Niky S, Keor Line RT

Address	Type	Function	Description	Length	Notes
97	U	3 / 4	Output Voltage [V]	1	
100	U	3 / 4	Output Power [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage [V]	1	
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency [Hz]	1	
114	U	3 / 4	Powerfail Counter	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over Temperature 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General Fault 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS communication lost 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(1)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(1)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(1)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(1)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(2)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(2)

145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(2)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(2)
147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(2)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(2)
149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(2)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(2)

- (1) not available in CS141B, CS141B SK  
(2) available only in CS141, CS141 SK

### 3.2. Daker DK, Keor LP, Keor S

Address	Type	Function	Description	Length	Note
97	U	3 / 4	Output Voltage [V]	1	
100	U	3 / 4	Output Power [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage phase L1 [V]	1	
105	S	3 / 4	Input Voltage phase L2 [V]	1	(1)
106	S	3 / 4	Input Voltage phase L3 [V]	1	(1)
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency phase L1 [Hz]	1	
112	U	3 / 4	Input Frequency phase L2 [Hz]	1	(1)
113	U	3 / 4	Input Frequency phase L3 [Hz]	1	(1)
114	U	3 / 4	Powerfail Counter	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over Temperature 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General Fault 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS communication lost 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(2)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(2)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(2)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(2)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(3)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(3)
145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(3)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(3)



147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(3)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(3)
149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(3)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(3)

- (1) available only in three-phase UPSs
- (2) available only in CS141, CS141 SK
- (3) not available in CS141B, CS141B SK

### 3.3. Dhea, Whad 800/2500, Megaline

Address	Type	Function	Name	Length	Notes
97	U	3 / 4	Output Voltage [V]	1	
100	U	3 / 4	Output Power [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage [V]	1	
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
114	U	3 / 4	Powerfail Counter	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over Temperature 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
127	U	3 / 4	Alarm: Charger failed 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General Fault 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS communication lost 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(1)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(1)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(1)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(1)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(2)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(2)
145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(2)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(2)
147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(2)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(2)

149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(2)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(2)

- (1) not available in CS141B, CS141B SK
- (2) available only in CS141, CS141 SK

### 3.4. Whad 3000/6000, Trimod, Trimod HE, Archimod, Archimod HE

Address	Type	Function	Description	Length	Notes
99	U	16 (10H)	Time synchronization signal When this signal is set, the CS141 sets the internal clock to 01:00 of the same day. Write only: commands 3 and 4 are not allowed.	1	
100	U	3 / 4	Output Power phase L1 [%]	1	
101	U	3 / 4	Output Power phase L2 [%]	1	(1)
102	U	3 / 4	Output Power phase L3 [%]	1	(1)
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage phase L1 [V]	1	
105	S	3 / 4	Input Voltage phase L2 [V]	1	(1)
106	S	3 / 4	Input Voltage phase L3 [V]	1	(1)
107	S	3 / 4	UPS Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency phase L1 [Hz]	1	
112	U	3 / 4	Input Frequency phase L2 [Hz]	1	(1)
113	U	3 / 4	Input Frequency phase L3 [Hz]	1	(1)
114	U	3 / 4	Powerfail Counter	1	
115	U	3 / 4	Alarm Battery Bad 1 = active; 0 = not active)	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over temperature 1 = active; 0 = not active	1	
120	U	3 / 4	Alarm: Input Bad 1 = active; 0 = not active	1	
121	U	3 / 4	Alarm: Output Bad 1 = active; 0 = not active	1	(2)
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
124	U	3 / 4	Alarm: Bypass Bad 1 = active; 0 = not active	1	
125	U	3 / 4	Alarm: Output Off as requested 1 = active; 0 = not active	1	
126	U	3 / 4	Alarm: UPS Off as requested 1 = active; 0 = not active	1	
127	U	3 / 4	Alarm: Charger Failed 1 = active; 0 = not active	1	
128	U	3 / 4	Alarm: UPS Output Off 1 = active; 0 = not active	1	
129	U	3 / 4	Alarm: UPS System Off 1 = active; 0 = not active	1	

132	U	3 / 4	Alarm: General fault 1 = active; 0 = not active	1	
133	U	3 / 4	Alarm: Diagnose test failed 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS Communication lost 1 = active; 0 = not active	1	
136	U	3 / 4	Alarm: Shutdown pending 1 = active; 0 = not active	1	
137	U	3 / 4	Alarm: shutdown imminent 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	Alarm: Manual Bypass Switch Closed 1 = active; 0 = not active	1	
140	U	3 / 4	Output Voltage phase L1 [V]	1	
141	U	3 / 4	Output Voltage phase L2 [V]	1	(1)
142	U	3 / 4	Output Voltage phase L3 [V]	1	(1)
143	U	3 / 4	Output Current phase L1 [A*10]	1	
144	U	3 / 4	Output Current phase L2 [A*10]	1	(1)
145	U	3 / 4	Output Current phase L3 [A*10]	1	(1)
152	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(3)
153	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(3)
154	U	3 / 4	Sensormanager sensor 3 Analog value	1	(3)
155	U	3 / 4	Sensormanager sensor 4 Analog value	1	(3)
156	U	3 / 4	Sensormanager sensor 5 Analog value	1	(3)
157	U	3 / 4	Sensormanager sensor 6 Analog value	1	(3)
158	U	3 / 4	Sensormanager sensor 7 Analog value	1	(3)
159	U	3 / 4	Sensormanager sensor 8 Analog value	1	(3)
160	U	3 / 4	Output Power phase L1 [kW]	1	
161	U	3 / 4	Output Power phase L2 [kW]	1	(1)
162	U	3 / 4	Output Power phase L3 [kW]	1	(1)
163	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(4)
164	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(4)
165	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(4)
166	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(4)

- (1) available only in three-phase UPS  
(2) available only in Trimod HE, Archimod HE  
(3) available only in CS141, CS141 SK  
(4) not available in CS141B, CS141B SK

### 3.5. Keor T

Address	Type	Function	Name	Length	Notes
100	U	3 / 4	Output Power phase L1 [%]	1	
101	U	3 / 4	Output Power phase L2 [%]	1	
102	U	3 / 4	Output Power phase L3 [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage phase L1 [V]	1	
105	S	3 / 4	Input Voltage phase L2 [V]	1	
106	S	3 / 4	Input Voltage phase L3 [V]	1	
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency phase L1 [Hz]	1	
112	U	3 / 4	Input Frequency phase L2 [Hz]	1	
113	U	3 / 4	Input Frequency phase L3 [Hz]	1	
114	U	3 / 4	Powerfail Counter	1	
115	U	3 / 4	Alarm Battery Bad 1 = active; 0 = not active)	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
118	U	3 / 4	Alarm: Battery Depleted 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over temperature 1 = active; 0 = not active	1	
120	U	3 / 4	Alarm: Input Bad 1 = active; 0 = not active	1	
121	U	3 / 4	Alarm: Output Bad 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
124	U	3 / 4	Alarm: Bypass Bad 1 = active; 0 = not active	1	
128	U	3 / 4	Alarm: UPS Output Off 1 = active; 0 = not active	1	
131	U	3 / 4	Alarm: Fuse failure 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General fault 1 = active; 0 = not active	1	
133	U	3 / 4	Alarm: Diagnose test failed 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: Communication lost 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	

139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(1)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(1)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(1)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(1)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(2)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(2)
145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(2)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(2)
147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(2)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(2)
149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(2)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(2)
151	U	3 / 4	Output Voltage phase L1 [V]	1	
152	U	3 / 4	Output Voltage phase L2 [V]	1	
153	U	3 / 4	Output Voltage phase L3 [V]	1	
154	U	3 / 4	Output Current phase L1 [A * 10]	1	
155	U	3 / 4	Output Current phase L2 [A * 10]	1	
156	U	3 / 4	Output Current phase L3 [A * 10]	1	

(1) not available in CS141B, CS141B SK

(2) available only in CS141, CS141 SK

### 3.6. Keor HP

Address	Type	Function	Name	Length	Notes
97	U	3 / 4	Output Voltage phase L1 [V]	1	
98	U	3 / 4	Output Voltage phase L2 [V]	1	
99	U	3 / 4	Output Voltage phase L2 [V]	1	
100	U	3 / 4	Output Power phase L1 [%]	1	
101	U	3 / 4	Output Power phase L2 [%]	1	
102	U	3 / 4	Output Power phase L3 [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage phase L1 [V]	1	
105	S	3 / 4	Input Voltage phase L2 [V]	1	
106	S	3 / 4	Input Voltage phase L3 [V]	1	
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency phase L1 [Hz]	1	
112	U	3 / 4	Input Frequency phase L2 [Hz]	1	
113	U	3 / 4	Input Frequency phase L3 [Hz]	1	
114	U	3 / 4	Powerfail Counter	1	
115	U	3 / 4	Alarm Battery Bad 1 = active; 0 = not active)	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
118	U	3 / 4	Alarm: Battery Depleted 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over temperature 1 = active; 0 = not active	1	
120	U	3 / 4	Alarm: Input Bad 1 = active; 0 = not active	1	
121	U	3 / 4	Alarm: Output Bad 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
124	U	3 / 4	Alarm: Bypass Bad 1 = active; 0 = not active	1	
125	U	3 / 4	Alarm: Output Off as requested 1 = active; 0 = not active	1	
126	U	3 / 4	Alarm: UPS Off as requested 1 = active; 0 = not active	1	
127	U	3 / 4	Alarm: Charger Failed 1 = active; 0 = not active	1	
128	U	3 / 4	Alarm: UPS Output Off 1 = active; 0 = not active	1	



129	U	3 / 4	Alarm: UPS System Off 1 = active; 0 = not active	1	
130	U	3 / 4	Alarm: Fan Failure 1 = active; 0 = not active	1	
131	U	3 / 4	Alarm: Fuse Failure 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General fault 1 = active; 0 = not active	1	
133	U	3 / 4	Alarm: Diagnose test failed 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS communication lost 1 = active; 0 = not active	1	
135	U	3 / 4	Alarm: Awaiting Power 1 = active; 0 = not active	1	
136	U	3 / 4	Alarm: Shutdown pending 1 = active; 0 = not active	1	
137	U	3 / 4	Alarm: Shutdown imminent 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(1)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(1)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(1)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(1)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(2)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(2)
145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(2)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(2)
147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(2)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(2)
149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(2)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(2)

(1) not available in CS141B, CS141B SK

(2) available only in CS141, CS141 SK

### 3.7. Keor HPE

Address	Type	Function	Name	Length	Notes
100	U	3 / 4	Output Power phase L1 [%]	1	
101	U	3 / 4	Output Power phase L2 [%]	1	
102	U	3 / 4	Output Power phase L3 [%]	1	
103	U	3 / 4	Battery Charge Level [%]	1	
104	S	3 / 4	Input Voltage phase L1 [V]	1	
105	S	3 / 4	Input Voltage phase L2 [V]	1	
106	S	3 / 4	Input Voltage phase L3 [V]	1	
107	S	3 / 4	Temperature [C°]	1	
108	S	3 / 4	Autonomy Time [minutes]	1	
109	U	3 / 4	UPS Status (ASCII HEX) Please check "Status Bytes table" below	1	
110	S	3 / 4	Battery Voltage [V]	1	
111	U	3 / 4	Input Frequency phase L1 [Hz]	1	
112	U	3 / 4	Input Frequency phase L2 [Hz]	1	
113	U	3 / 4	Input Frequency phase L3 [Hz]	1	
114	U	3 / 4	Powerfail Counter	1	
115	U	3 / 4	Alarm Battery Bad 1 = active; 0 = not active)	1	
116	U	3 / 4	Alarm: On Battery 1 = active; 0 = not active	1	
117	U	3 / 4	Alarm: Battery Low 1 = active; 0 = not active	1	
118	U	3 / 4	Alarm: Battery Depleted 1 = active; 0 = not active	1	
119	U	3 / 4	Alarm: Over temperature 1 = active; 0 = not active	1	
120	U	3 / 4	Alarm: Input Bad 1 = active; 0 = not active	1	
121	U	3 / 4	Alarm: Output Bad 1 = active; 0 = not active	1	
122	U	3 / 4	Alarm: Output Overload 1 = active; 0 = not active	1	
123	U	3 / 4	Alarm: On Bypass 1 = active; 0 = not active	1	
124	U	3 / 4	Alarm: Bypass Bad 1 = active; 0 = not active	1	
125	U	3 / 4	Alarm: Output Off as requested 1 = active; 0 = not active	1	
126	U	3 / 4	Alarm: UPS Off as requested 1 = active; 0 = not active	1	
127	U	3 / 4	Alarm: Charger Failed 1 = active; 0 = not active	1	
128	U	3 / 4	Alarm: UPS Output Off 1 = active; 0 = not active	1	
129	U	3 / 4	Alarm: UPS System Off 1 = active; 0 = not active	1	
130	U	3 / 4	Alarm: Fan Failure 1 = active; 0 = not active	1	

131	U	3 / 4	Alarm: Fuse Failure 1 = active; 0 = not active	1	
132	U	3 / 4	Alarm: General fault 1 = active; 0 = not active	1	
133	U	3 / 4	Alarm: Diagnose test failed 1 = active; 0 = not active	1	
134	U	3 / 4	Alarm: UPS communication lost 1 = active; 0 = not active	1	
135	U	3 / 4	Alarm: Awaiting Power 1 = active; 0 = not active	1	
136	U	3 / 4	Alarm: Shutdown pending 1 = active; 0 = not active	1	
137	U	3 / 4	Alarm: Shutdown imminent 1 = active; 0 = not active	1	
138	U	3 / 4	Alarm: Test in progress 1 = active; 0 = not active	1	
139	U	3 / 4	AUX Port 1 1 = active (high); 0 = not active (low)	1	(1)
140	U	3 / 4	AUX Port 2 1 = active (high); 0 = not active (low)	1	(1)
141	U	3 / 4	AUX Port 3 1 = active (high); 0 = not active (low)	1	(1)
142	U	3 / 4	AUX Port 4 1 = active (high); 0 = not active (low)	1	(1)
143	U	3 / 4	Sensormanager / SM_T_COM sensor 1 Analog value	1	(2)
144	U	3 / 4	Sensormanager / SM_T_COM sensor 2 Analog value	1	(2)
145	U	3 / 4	Sensormanager sensor 3 Analog value	1	(2)
146	U	3 / 4	Sensormanager sensor 4 Analog value	1	(2)
147	U	3 / 4	Sensormanager sensor 5 Analog value	1	(2)
148	U	3 / 4	Sensormanager sensor 6 Analog value	1	(2)
149	U	3 / 4	Sensormanager sensor 7 Analog value	1	(2)
150	U	3 / 4	Sensormanager sensor 8 Analog value	1	(2)

- (1) not available in CS141B, CS141B SK  
(2) available only in CS141, CS141 SK

### 3.8. Status Bytes table ( see registry 109 of all previous tables )

UPS Status	Hex Value	Dec Value	Description
UPS_SB_BYPASS_MODE	0x0001	1	UPS is in bypass
UPS_SB_SHUTDOWN	0x0002	2	Shutdown UPS
UPS_SB_OUTPUT_ACT	0x0004	4	Inverter on = UPS OK
UPS_SB_BACKUP_MODE	0x0008	8	UPS is working in battery mode
UPS_SB_BATTERY_LOW	0x0010	16	Battery Low signal
UPS_SB_OVER_TEMP	0x0020	32	Over temperature
UPS_SB_TEST_ACT	0x0040	64	Test in progress
UPS_SB_INPUT_HIGH	0x0080	128	Input voltage too high
UPS_SB_OUTPUT_HIGH	0x0100	256	Overload
UPS_SB_INVERTER_FAILURE	0x0200	512	Inverter error
UPS_SB_BATTERY_BAD	0x0400	1024	Battery error
UPS_SB_ECO_MODE	0x0800	2048	ECO mode
UPS_SB_COMM_LOST	0x4000	16384	For snmp


#### Examples (decimal):

- STATUS= "4" means UPS\_SB\_OUTPUT\_ACT (4) + no other alarms = UPS OK
- STATUS= "5" means UPS\_SB\_OUTPUT\_ACT (4) + UPS\_SB\_BYPASS\_MODE (1) are active ! = UPS on Bypass!
- STATUS= "12" means UPS\_SB\_OUTPUT\_ACT (4) + UPS\_SB\_BACKUP\_MODE (8) are active ! = UPS Powerfail!
- STATUS= "22" means UPS\_SB\_OUTPUT\_ACT (4) + UPS\_SB\_BACKUP\_MODE (8) + UPS\_SB\_BATTERY\_LOW (10) are active ! = UPS Powerfail and Battery low!
- STATUS= "68" means UPS\_SB\_OUTPUT\_ACT (4) + UPS\_SB\_TEST\_ACT (64) are active ! = UPS battery test is running

## 4. Appendix

### 4.1. RS485 Connector for CS141M and CS141M SK

Phoenix 1952267 connector:

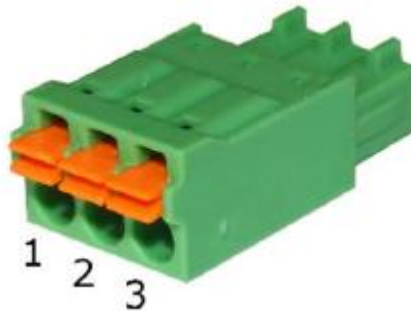

Pin 1: -> GND  
Pin 2: -> RS485 (+)  
Pin 3: -> RS485 (-)

### 4.2. Bus termination

It is necessary to set the last bus device on the RS485 bus jumper for the bus termination (120 ohm). Please remove the 4 screws at the bottom of the adapter in order to open the box. You will find the jumper near the Modbus connector (see below).

Default is OFF (CS141 is NOT last device). To terminate the RS485 bus at your CS141, please close the Jumper.

